


NW500 TE Assembly and maintenance instructions

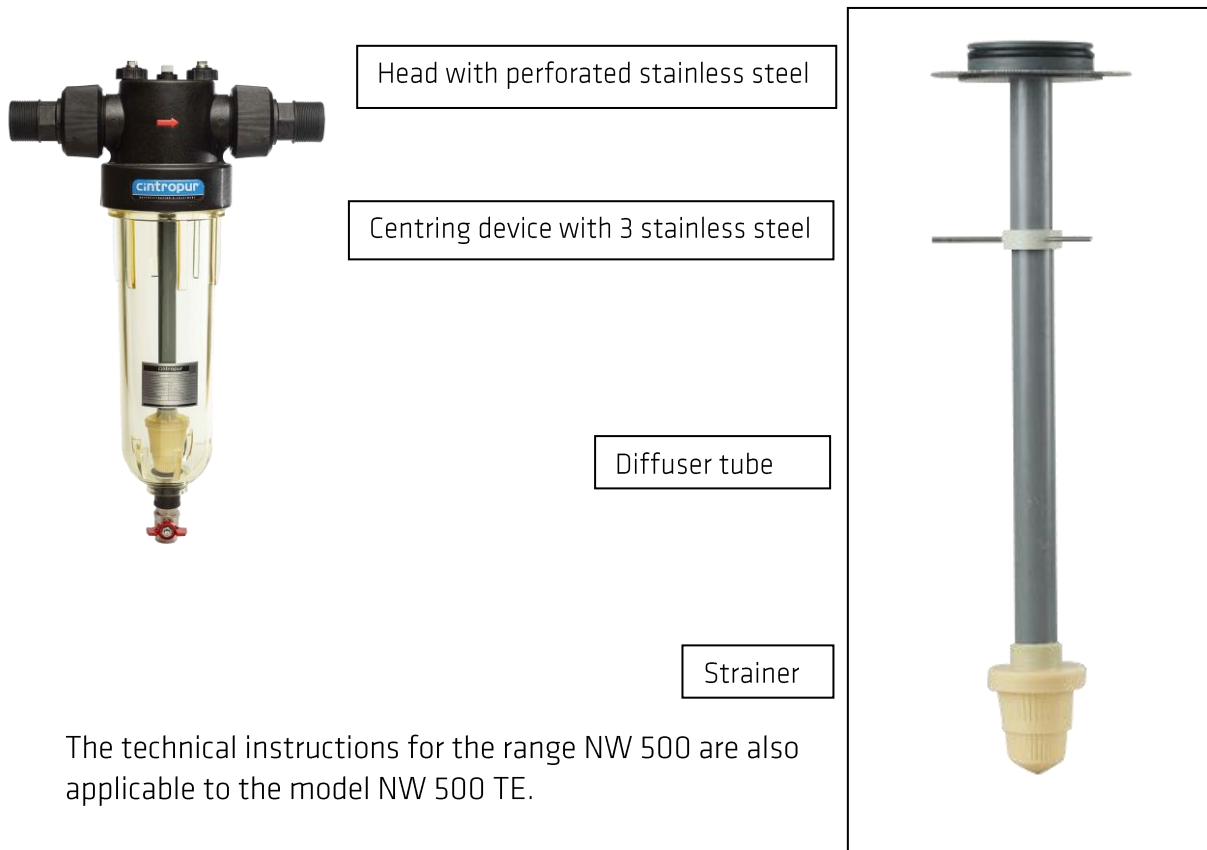

The technical instructions for the range NW 500 are also applicable to the model NW 500 TE.

Handling and filling the bowl

1. Unscrew the filter bowl with the spanner.
2. Remove the head with its perforated stainless steel grille from the diffuser tube (if the head remains in the filter head during disassembly, it is not necessary to take it out).
3. Introduce the tube with the strainer into the bottom of the bowl, placing the tip of the strainer in the drain hole.
4. Slide the stainless steel 3-rod centring device downwards until the tube has no more play and is fully centred.
5. Pour the materials (activated carbon, polyphosphates etc.) into the bowl, taking care not to allow any of it into the tube hole. The maximum level of the treatment materials is 2 cm from the top edge of the bowl.
6. Ensure that the thread and the joint stay clean.
7. Replace the head with its perforated stainless steel grille onto the diffuser tube.
8. Screw the bowl into the head: the tightness between the head and the bowl is ensured by an O-ring; tightening lightly with the supplied spanner is adequate.