

### FOR USE WITH DOE CARTRIDGES

A scale treatment modification for Double Open Ended (DOE) cartridges. The SPECTRUM SRHP-5 is designed to be used as a 'bolt-on' to your current radial flow sediment or carbon cartridge. Simply insert the element into the central core of your existing cartridge to provide it with the additional benefit of hexametaphosphate media to prevent scale formation and the precipitation of hardness forming ions.



### FEATURES & BENEFITS



- Effective protection from scale, corrosion and rust
- Alternative to ion exchange technology

### MATERIALS OF CONSTRUCTION




Media: FDA Type Hexametaphosphate  
 Body: Polypropylene

### TECHNICAL DATA




<b>Operating Temperature (°C)</b>	4 - 38
<b>Maximum Hardness</b>	250mg/l CaCO <sub>3</sub>
<b>Maximum Flow (lpm)</b>	6
<b>Hexametaphosphate Crystals (g)</b>	40

### DIMENSIONS

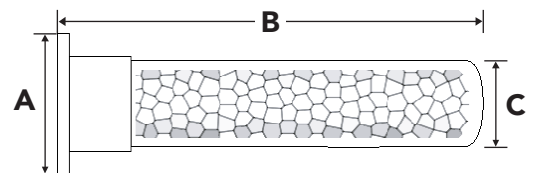


Dimensions (mm)		
A	B	C
137	33	25.5

PERFORMANCE

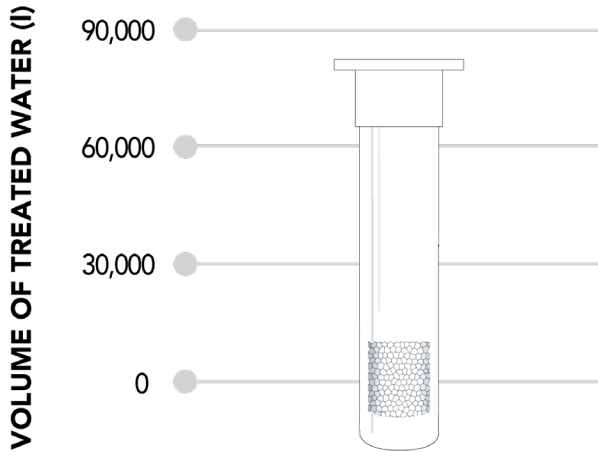

Cartridge Capacity	
Cartridge Length (")	Volume of Treated Water (l)
5	7,125

DIAGRAM

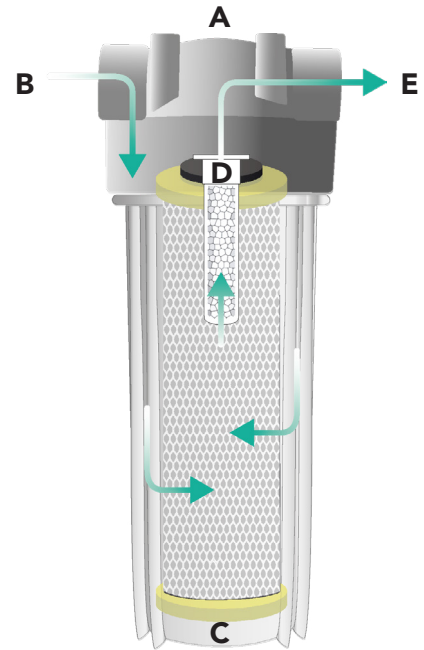

Features				
A	B	C	D	E
Housing	Feed Water	DOE Cartridge	SRHP-5 Cartridge	Treatment Water

ORDERING GUIDE



Code	Length (")	Box Quantity
SRHP <input type="text" value="5"/>	5	24

e.g. SRHP-5